




User's Manual for Surveyor 300 Hand Held Metal Detector

Thank you for choosing this pinpoint metal detector. The unique sealed design allows detecting in any environment including grass, mud, dirt, sand, black sand, or even 3 meters under water.

Read all instructions before using this metal detector

Parts Of The Metal Detector

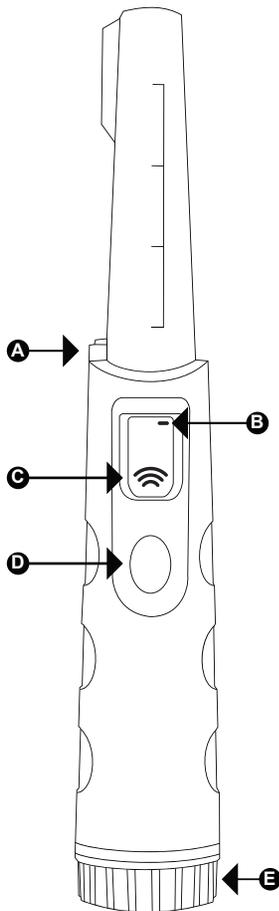

- A. LED Light
- B. Low Battery Indicator
- C. LCD
- D. Power Button
- E. Battery Compartment

Features

Vibration, Sound & Light

When a target is located the detector alarms with pulses of vibration or sounds from buzzer, or both sound and vibration.

LCD

Displays the detected target signal and battery condition.

Target Distancing

As you get closer to the target, the target signal on LCD, vibration, sound will increase in quantity.

Target Indication

There are four types of target indication: LCD, sound, vibration, sound & vibration.

LED Light

In dark places you can turn on the light for better detection. With two short presses on power button you can turn on or off the light.

Automatic Tuning

Requires no adjustment.

Memory

The detector memorizes the current setting when power turns off.


Waterproof

Sealed design allows hunting in the rain or up to 3 meters under water.

Battery Installation

To open the battery compartment, rotate the battery cover counter-clockwise.

Connect a standard 9volt alkaline battery to the battery connector and insert the battery into the detector making sure the polarity is matched correctly. Then turn the battery cover clockwise until hand tight to assure a water-tight seal.

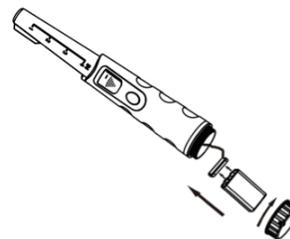

Operating Instructions

Turn On The Detector

Press power button to turn on the detector. Then, the detector sounds and vibrates, LED lights. A steady light indicates unit is ready for operation.

Turn Off The Detector

After use, press the power button holding for about two seconds to turn off the detector.

Note:

- If no button is pressed or no metal is detected within about 10 minutes, the detector will automatically turn off.
- The detector memorizes the current setting when power turns off.

Low Battery Indication

If the unit sounds and vibrates, also LED flashes continuously for about 10 seconds, this indicates that the battery is low. You have to replace the battery.

Detecting A Target

After turning on the detector, you can start detection. First you can select one type of target indication by pressing power button. Press power button first time to get sound indication. When target is located, the detector indicates with sound and LCD display. Press power button the second time to get vibration indication. When target is located, the detector indicates with vibration and LCD display. Press power button the third time to get both sound and vibration indication. When target is located, the detector indicates with both sound and vibration. Meanwhile LCD displays the target signal. Signal on LCD, sound and pulses of vibration increase in quantity as the closer the detector is to a detected target. The quantity of pulses is proportional to the target size and distance. The bigger the target, or the closer the detector is to the target, the higher the pulse counts.

Helpful Hints

- You can secure the detector to your wrist using the attached wrist strap.
- Before submerging the detector make sure the battery compartment seal is secure.
- Always use high quality batteries such as alkaline or nickel metal hydride (NiMH).



1 YEAR LIMITED WARRANTY

Metal Detector

WINBEST® by BARSKA®, as manufacturer, warrants this new product to be free of original defects in materials and/or workmanship for the length of time specified by this warranty. This warranty does not include damage caused by abuse, improper handling, installation, maintenance, normal wear-and-tear, unauthorized repairs or modifications and tampering in anyway.

This warranty is limited to the original purchaser and is not transferable. This warranty applies only to products purchased in the United States of America, excludes the Hawaiian Island and all U.S. territories in the Caribbean, Alaska and the Pacific

In the event of a defect within 30 days, the consumer must return the defective unit to the WINBEST® by BARSKA® dealer (the place of purchase) at his/her own expense.

Beyond 30 days, WINBEST® by BARSKA® products should be sent to the following address for warranty repairs. Products must be packed carefully and sturdily to prevent damage in transit, and returned freight prepaid to:

WINBEST® by BARSKA®
855 Towne Center Drive
Pomona, CA 91767

For additional and updated information
please visit www.barska.com

Please email info@barska.com or call 1.909.445.8168 for Return Merchandise Number (RMA#) before any returns.
NOTE: All merchandise received without a valid RMA# will be returned to shipper at his/her own expense.

Please include all of the following when returning WINBEST® by BARSKA® products for service and/or replacement:

1. Please write your complete details (Name, Address, Telephone #, E-mail address, RMA#, etc.)
2. Purchase receipt or Proof of Purchase. (Original/Copy)
3. A brief explanation of the defect

*Please allow 6-8 weeks for delivery

This product will either be replaced or repaired at the discretion of the warrantor. If it's a discontinued item, we will replace the product with an equivalent product. Should the repair not be covered by this warranty, an estimate will be sent for your approval. Non-warranty repairs or refurbishing are always provided at a reasonable cost.

WINBEST® by BARSKA® shall not be liable for any consequential, incidental and/or contingent damages whatsoever. We will not pay shipping, insurance or transportation charges from you to us, or any import fees, duties and or taxes. This warranty supersedes all previous Winbest® by BARSKA warranties.