

LIMITED EDITION

ALARM CHRONOGRAPH MODULE













MODE TRANSITION DIAGRAM

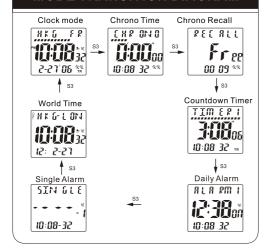


REGULAR DISPLAY AND BUTTON OPERATION

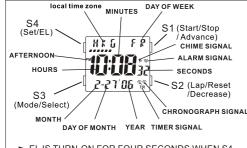

► EL IS TURN-ON FOR FOUR SECONDS WHEN S4 **BUTTON IS DEPRESSED**

402N396R

HOW TO SET NORMAL TIME/CALENDAR

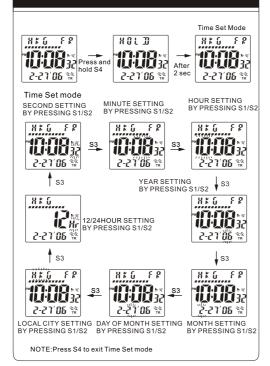


WORLD TIME ZONE MODE



FIX 6- LON first line: local time zone and second time second line: local time third line: time and date of second time

S1: the time is updated when ON/OFF is

		S2: switch to second time zone
City	Time	City
Code	difference	,
H11	-11	Pago Pago
HNL	-10	Honolulu, Papeete
ANC	-9	Anchorage, Nome
LAX	-8	Los Angeles, San Francisco, Las Vegas, Vancouver, Seattle
DEN	-7	Denver, Edmonton
CHI	-6	Chicago, Mexico City, Houston, New Orleans, Winnipeg
NYC	-5	New York, Washington, Montreal, Lima, Havana, Boston
CCS	-4	Caracas, Santiago
RIO	-3	Rio de Janeiro, Buenos Aires, Brasilia, Montevideo, Sao Paulo
H02	-2	
H01	-1	Praia
GMT	0	
LON	0	London, Dublin, Reykjavik, Casablanca, Lisbon
PAR	1	Paris, Vienna, Brussels, Berlin, Madrid, Rome,
		Milan Algiers, Hamburg, Frankfurt, Stockholm
CAI	2	Cairo, Athens, Helsinki, Istanbul, Beirut, Damascus
JED	3	Jeddah, Moscow, Baghdad, Nairobi, Kuwait, Riyadh
DXB	4	Dubai, Abu Dhabi, Muscat
KHI	5	Karachi, Male
DAC	6	Dacca, Colombo
BKK	7	Bangkok, Hanoi, Jakarta, Phnom Penh, Vientiane
HKG	8	Hong Kong, Beijing, Singapore, Manila, Taipei, Kuala Lumpur, Perth
TYO	9	Tokyo, Seoul, Pyongyang
SYD	10	Sydney, Guam, Melbourne, Rabaul
NOU	11	Noumea, Port Vila
WLG	12	Wellington, Auckland, Christchurch, Nauru Island

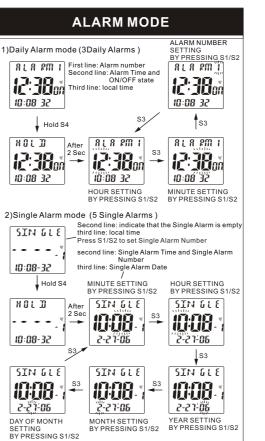

COUNTDOWN TIMER MODE




NOTE:Press S4 to exit Set mode

TIM { P | first line: Timer number (can set 3 segments third line: display the setted value for the relevant segment at most)

Running state

TIMER NUMBER

SETTING BY PRESSING S1/S2

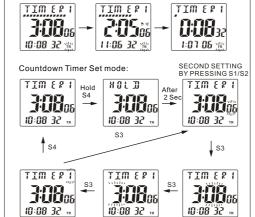

HOUR SETTING MINUTE SETTING BY PRESSING S1/S2 BY PRESSING S1/S2

Running state C N & O L 1 O C X & OL10 [H & O110 10':08" 32 ** 0 12 23 ※ 0′ 18″56 💥 l S2 C H b OL10 O' 30"80 💥 Press S1 to stop Then Press S2 store Lap tim from start Chrono Recall state First line: Current work state Second and Third line: Spare space and Third line: Time and date for 8 £ [8 L L 8 N U O O I Free 00 09 ** 2-27'06 ** l S1 186005 180001 **[]**: |**2**|23 1 38"86 ** 0′ 18″56 ** Delete all of the records: Deletina Deleting over PEC ALL DECETE PEE BLL Free $Fr_{\ell\ell}$ 00 09 ** 00 IS_** Press S4 and hold for 2 seconds C H U O110 10:08 32 **

CHRONO TIME MODE

CARE OF YOUR WATCH

- 1. This watch contains electronic components. Never attempt to open the case or remove the back cover.
- 2.Do not operate push buttons below the surface of the water while swimming or diving.
- 3. Should water or condensation appear in the watch, have the watch checked immediately. Corrosion of electronic parts can occur inside the case.
- 4. Avoid severe impact. The watch is designed to withstand impact under normal use. It is inadvisable to subject it to severe impact or rough usage.
- 5. Avoid exposing the watch to extreme temperature.
- 6.Clean the watch with soft cloth and clean water only. Avoid using chemicals, The waterproof gasket will corrode.
- 7. Keep your watch away from the conditions of strong electric field and static electricity.