

EN

To Reset Combination Code

1. To initially reset the code, set the dials to the original preset combination of (000).

Press the square push button on the latch to check that it depresses easily. **This is the UNLOCK/OPEN state.**



2. When the latch is open, look for the reset button located underneath the latch.
3. Press and HOLD the button, while turning the dials to the desired 3-digit combination.

Once the desired 3-digit combination is set, release the button.

4. To test, turn the dials to a different combination, then press the square push button. It should NOT depress. Now try dialing the correct 3-digit combination and press the square push button. This should now depress.

Repeat this process for the other TSA latch.

** If you mistakenly release the reset button before selecting your desired 3-digit combination, the code WILL BE SET to the combination currently displayed. Immediately STOP moving the dial(s). If necessary, adjust dial(s) slightly to ensure the square latch button moves/opens freely. **Then depress and hold the button fully the whole time** while adjusting the digits to the desired combination. Then release the button. The combination is now set.

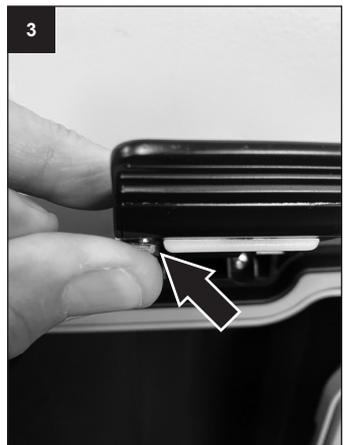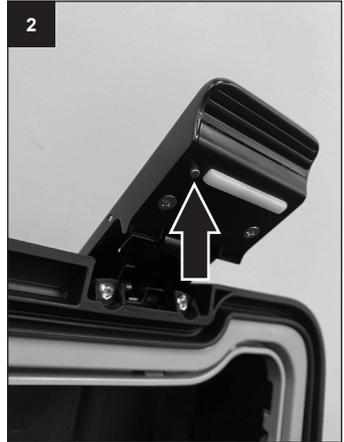

FR

Pour Réinitialiser Le Code

1. Pour réinitialiser le code, réglez les cadrans sur la combinaison pré-réglée d'origine (000).

Appuyez sur le bouton-poussoir carré du loquet pour vérifier qu'il s'enfonce facilement. **Il s'agit de la position DÉVERROUILLAGE/OUVERT.**

2. Lorsque le loquet est ouvert, cherchez le bouton réinitialiser situé sous le loquet.
3. Appuyez sur ce dernier et maintenez-le enfoncé, tout en tournant les cadrans jusqu'à la combinaison à trois chiffres souhaitée.

Une fois la combinaison de 3 chiffres choisie, relâchez le bouton.

4. Pour tester, tournez les cadrans sur une autre combinaison, puis appuyez sur le bouton poussoir carré. Ce bouton ne doit PAS s'enfoncer. Essayez maintenant de composer la bonne combinaison à trois chiffres et appuyez sur le bouton-poussoir carré. Celui-ci doit alors s'enfoncer.

Répétez cette opération pour l'autre loquet TSA.

** Si vous relâchez par erreur le bouton réinitialiser avant d'avoir sélectionné la combinaison à 3 chiffres souhaitée, le code correspondra à la combinaison affichée en cours de réglage. Arrêtez immédiatement de tourner le(s) cadran(s). Si nécessaire, ajustez légèrement le(s) cadran(s) pour vous assurer que le bouton du loquet carré se déplace et s'ouvre librement. **Appuyez ensuite sur le bouton et maintenez-le enfoncé pendant toute la durée de l'opération**, tout en réglant les chiffres sur la combinaison souhaitée. Relâchez ensuite le bouton. La combinaison est maintenant établie.



PELICAN™

PELICAN PRODUCTS, INC.

23215 Early Avenue • Torrance, CA 90505 USA
Tel (310) 326-4700 • FAX (310) 326-3311 • www.pelican.com

PELICAN PRODUCTS ULC

10221-184th Street • Edmonton, Alberta T5S 2J4
Tel (780) 481-6076 • FAX (780) 481-9586 • www.pelican.ca

HC22-33640-000 5-44668 Rev A OC/24
© 2024 Pelican Products, Inc.



All trademarks are registered and/or unregistered trademarks of Pelican Products, Inc., its subsidiaries and/or affiliates.

PART #		REV	ECR #	RELEASE DATE	DATE
HC22-33640-000		A	5-44668	OC 24	10-25-24
BLACK	SIDES	PAPER THICKNESS	FLAT SIZE	NUMBER OF FOLDS	FOLDED SIZE
	2 Sided		11.00" h x 5.50" w	1 half fold	5.50" h x 5.50" w
DESIGN TEAM		MARKETING COPY		TECHNICAL COPY	PRODUCT MGMT.
Tyler Bennett				Vildana Jahic	Paulo Quitain
10-29-24	<input checked="" type="checkbox"/>	<input type="checkbox"/>	10-29-24	<input checked="" type="checkbox"/>	10-29-24 <input checked="" type="checkbox"/>