



ADVANCE PRO™ 2


Assembly Instructions

PACKAGE INCLUDES:

Frame assembly, tent body, stakes

1 PREPARE FOR SETUP

1. Stake out four corners tightly.
2. Insert poles into pole sleeves.

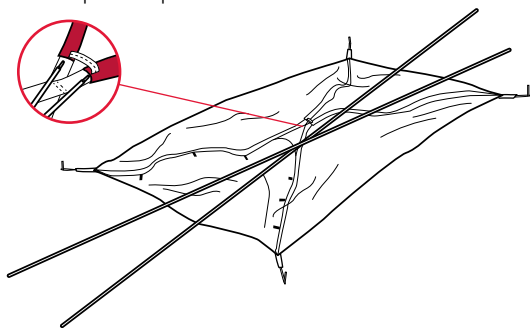

2 ASSEMBLE TENT FRAME

1. Insert pole end tips into corner grommets.



3 ATTACH CROSS POLE

1. Attach clips to tent pole.



USE TIPS: All tents require staking; unsecured tents are susceptible to wind damage. In some conditions, additional stakes and cord may be required. Re-adjustment of stakes and rainfly may be necessary to keep tent tight and weatherproof. For complete care and use instructions, refer to the Owner's Manual (available at www.msrgear.com/AdvancePro2).



MOUNTAIN SAFETY RESEARCH®

© 2017 Cascade Designs, Inc.
4000 First Avenue South
Seattle, WA 98134 USA

1-800-531-9531 | 1-206-505-9500